

Main Mode

leo³ wi

α 9 | α 7r IV | α 7s III | α 7r III | α 7 III | α 7r II | α 7s II | α 7 II |
α 7r | α 7s | α 7 | α 6600 | α 6500 | α 6400 | α 6300 |
α 6100 | α 6000

1. Autofocus (Exposure Reading) in AF-S | AF-A | AF-C, and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.). In MF it becomes the Push Focus function*.

2. Photo Shoot:

Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).

Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).

3. This button starts or ends the Video Recording (REC).

The following buttons are enabled in Manual Mode (M). The mode selection must be done before inserting the camera into the Housing. If you choose another mode, only manually set functions are available.

4. Aperture -

5. Aperture +

6. Shutter Speed - Press the buttons 4,5,6,7,8,9 once to change by one step.

7. Shutter Speed + Keep pressed to quickly change the chosen parameter.

8. ISO +

9. ISO -

10. Switch Mode, allows you to change the function of each button. The mode switch is indicated by a blue LED switched on.

11. On / Off electronic board. To switch on, press until the red LED of the electronics is activated. To switch off, push until the camera monitor turns off. The camera will turn off completely. To turn on the camera, push this button again.

* Function must be set from the Camera Menu "Custom Keys".



Front

Back

Button Panel Leo3 Wi

Switch Mode Blue Led Activated

leo³ wi

α 9 | α 7r IV | α 7s III | α 7r III | α 7 III | α 7r II | α 7s II | α 7 II |
α 7r I | α 7s I | α 7 I | α 6600 | α 6500 | α 6400 | α 6300 |
α 6100 | α 6000

1. This Button Confirm the selection. In the Camera menu, you can enter into the various sub-menus.
2. Like Button 2 Main Mode.
3. Display button, allows you to change the information in camera display. In Camera Menu, you can move the selection upwards.
4. Customizable Function Button Left*. In Camera Menu, you can move the selection to the left.
5. Customizable Function Button Right *. In Camera Menu, you can move the selection to the Right.
6. Customizable Function Button Down*. In Camera Menu, you can move the selection downwards.
7. Menu button, allows you to enter the Camera menu. Inside the menu it allows you to exit from the sub-menu or return to Live View mode.
8. Play button allows you to enter into the Camera Gallery to review photos and videos made. Buttons 3, 4, 5, 6 allow you to navigate through the gallery.
9. Canc button allows you to delete the photos or videos Selected in the Gallery. Press
10. Switch Mode, allows you to change the function of each button. The mode switch is indicated by a blue LED switched on.
11. On / Off electronic board. To switch on, press until the red LED of the electronics is activated. To switch off, push until the camera monitor turns off. The camera will turn off completely. To turn on the camera, push this button again.

* It is Necessary Set the Customizable Button in the Camera Menu. It is also possible to change the Customizable Button during the dive.



Front

Button Panel Leo3 Wi

Back