

Main Mode

leo³ wi

800D | 760D | 750D | 700D | 650D | 600D |
 550D | 500D | 450D | 400D | 350D | 300D |
 250D | 200D | 2000D | 4000D | 1300D | 1200D |
 1100D | 1000D | M50 |

1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).

2. Photo Shoot:

Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).

Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).

In Video Mode becomes the button that starts or ends the Video Recording (REC).

3. Video Mode, Enable Live View Video and video button functions. To return to Photo mode, press the button 3 again.

Buttons 4,5,6,7 Change function depending in which Mode is setted the Camera.

Manual Mode (M):	Shutter - Priority (Tv):	Aperture - Priority (Av):
4. Aperture -	4. EV -	4. Aperture -
5. Aperture +	5. EV +	5. Aperture +
6. Shutter Speed -	6. Shutter Speed -	6. EV -
7. Shutter Speed +	7. Shutter Speed +	7. EV +

8. ISO + Press the buttons 4,5,6,7,8,9 once to change by one step. Keep

9. ISO - pressed to quickly change the chosen parameter.

10. Switch Mode, allows you to change the function of each button. The mode switch is indicated by a blue LED switched on.

11. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.



Front

Back

Button Panel Leo3 Wi

Switch Mode Blue Led Activated

leo³ wi

800D | 760D | 750D | 700D | 650D | 600D |
550D | 500D | 450D | 400D | 350D | 300D |
250D | 200D | 2000D | 4000D | 1300D | 1200D |
1100D | 1000D | M50 |

1. Like Button 1 Main Mode. In Video Mode becomes Autofocus Video mode (hold down to focus).
2. Like Button 2 Main Mode. In Video Mode becomes the button that starts or ends the Video Recording (REC).
3. In Video Mode becomes the x5 / x10 zoom of the focus point.
4. Change Preset White Balance (Auto | Incandescent | Fluorescent | Direct Sunlight | Flash | Cloudy | Shade).
5. Change Mode (M/Av/Tv/P). Insert the Camera in Mode M.
6. Change Metering Mode (Matrix Center - Average - Spot). **
7. Change Autofocus Mode:
 - Photo Mode: One-shot AF | Ai Focus AF | Ai Servo AF | Remote Manual.
 - Video Mode: Quick Mode | Live Mode | Face Detect | Remote Manual.
8. Change Drive Mode: Single Shoot | Cont.Low | Cont.High | Self-timer 10 sec | Self-timer 2 sec.*
9. Button with no associated function.
10. Switch Mode, allows you to change the function of each button. The mode switch is indicated by a blue LED switched on.
11. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.

* Functions may change according to the model of camera.

** In WB Custom, with this button is possible to acquire the WB Manually.



Front

Back

Button Panel Leo3 Wi