

## Main Mode

leo<sup>3</sup> wi

D7500 | D7200 | D7100 | D7000 | D5600 | D5500 |  
D5300 | D5200 | D5100 | D5000 | D3500 | D3400 |  
D3300 | D3200 | D3100 | D3000

**1.** Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).

**2.** Photo Shoot:

Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).

Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).

**3.** Button with no associated function. In D7500 this button Enables or disables the Single HDR function.

Buttons 4,5,6,7 Change function depending in which Mode is setted the Camera.

Manual Mode (M):	Shutter - Priority (Tv):	Aperture - Priority (Av):
<b>4.</b> Aperture -	<b>4.</b> EV -	<b>4.</b> Aperture -
<b>5.</b> Aperture +	<b>5.</b> EV +	<b>5.</b> Aperture +
<b>6.</b> Shutter Speed -	<b>6.</b> Shutter Speed -	<b>6.</b> EV -
<b>7.</b> Shutter Speed +	<b>7.</b> Shutter Speed +	<b>7.</b> EV +

**8.** ISO +                    Press the buttons 4,5,6,7,8,9 once to change by one step. Keep  
**9.** ISO -                    pressed to quickly change the chosen parameter.

**10.** Switch Mode, allows you to change the function of each button. The mode switch is indicated by a blue LED switched on.

**11.** On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.



Front

Button Panel Leo3 Wi

Back

## Mode Switch Blue Led Activated

leo<sup>3</sup> wi

D7500 | D7200 | D7100 | D7000 | D5600 | D5500 |  
D5300 | D5200 | D5100 | D5000 | D3500 | D3400 |  
D3300 | D3200 | D3100 | D3000

1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).
2. Photo Shoot:  
Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot.  
Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).
3. Shift Focus Point UP.\*
4. Shift Focus Point LEFT\*
5. Shift Focus Point RIGHT.\*
6. Shift Focus Point DOWN.\*
7. Autofocus Mode (af-s | af-c)\*
8. Metering Mode (Matrix Center - Average - Spot).
9. AF-Area Mode (Single-point AF - Auto-area AF - Group-area AF)\*.
10. Switch Mode, allows you to change the function of each button. The mode switch is indicated by a blue LED switched on.
11. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.

\* not available for D3000 | D3100 | D3200 | D3300 | D3400



Front

Button Panel Leo3 Wi

Back