

Main Mode

leo³ wi

| E-M1 Mk II | E-M5 Mk II | E-M10 Mk II |

1. Autofocus (Exposure Reading) in S-AF | C-AF, and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).

2. Photo Shoot:

Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).

Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).

3. This button starts or ends the Video Recording (REC).

The following buttons are enabled in Manual Mode (M). The mode selection must be done before inserting the camera into the Housing. If you choose another mode, only manually set functions are available.

4. Aperture -

5. Aperture +

6. Shutter Speed -

7. Shutter Speed +

8. ISO +

9. ISO -

10. Switch Mode, allows you to change the function of each button. The mode switch is indicated by a blue LED switched on.

11. On / Off electronic board. To switch on, press until the red LED of the electronics is activated. To switch off, push until the electronic board is switched off. The camera will turn off in standby time set. To turn on the camera, push this button again.

Press the buttons 4,5,6,7,8,9 once to change by one step. Keep pressed to quickly change the chosen parameter.



Front

Button Panel Leo3 Wi

Back

Switch Mode Blue Led Activated

leo³ wi

| E-M1 Mk II | E-M5 Mk II | E-M10 Mk II |

1. In MF Mode, this button become the Magnifying point of Focus.
2. Photo Shoot:
Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot.
Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).
3. Allows to move upward the Focus Point.
4. Allows to move on the left the Focus Point.
5. Allows to move on the right the Focus Point.
6. Allows to move downward the Focus Point.
7. Button Autofocus Mode (S-AF, C-AF, MF).
8. In Mode MF, Allows you to change the focus (Focus +).
9. In Mode MF, Allows you to change the focus (Focus -).
10. Switch Mode, allows you to change the function of each button. The mode switch is indicated by a blue LED switched on.
11. On / Off electronic board. To switch on, press until the red LED of the electronics is activated. To switch off, push until the electronic board is switched off. The camera will turn off in standby time set. To turn on the camera, push this button again.



Button Panel Leo3 Wi