

Right Hand Control

leo³

1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).
 2. Photo Shoot:
 - Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).
 - Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).
 3. Change Mode (M/Av/Tv/P). Insert the Camera in Mode M.*
- Buttons 4,5,6,7 Change function depending in which Mode is setted the Camera.
- | | | |
|---------------------------|---------------------------|---------------------------|
| Manual Mode (M): | Shutter - Priority (Tv): | Aperture - Priority (Av): |
| 4. Aperture - | 4. EV - | 4. Aperture - |
| 5. Aperture + | 5. EV + | 5. Aperture + |
| 6. Shutter Speed - | 6. Shutter Speed - | 6. EV - |
| 7. Shutter Speed + | 7. Shutter Speed + | 7. EV + |
8. ISO + Press the buttons 4,5,6,7,8,9 once to change by one step. Keep
 9. ISO - pressed to quickly change the chosen parameter.
 10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.

***Change Mode Available for Models D850 | D810 | D800 | D800e | D700 | D500 | D300 | D300s | D200. For other models, the button has no associated function.**

Nikon

D850 | D810 | D800e | D800 | D750 | D700 | D610 | D600 | D500 | D300 | D300s | D200 | D100 | D90 | D80 | D70 | D50 | D40 | D7500 | D7200 | D7100 | D7000 | D5600 | D5500 | D5300 | D5200 | D5100 | D5000 | D3500 | D3400 | D3300 | D3200 | D3100 | D3000



Front

Back

Left Hand Control

leo³

D850 | D810 | D800e | D800 | D750 | D700 | D610 | D600 | D500 | D300 | D300s | D200 | D100 | D90 | D80 | D70 | D50 | D40 | D7500 | D7200 | D7100 | D7000 | D5600 | D5500 | D5300 | D5200 | D5100 | D5000 | D3500 | D3400 | D3300 | D3200 | D3100 | D3000

1. Autofocus Mode (af-s | af-c).*
2. Change Preset White Balance (Auto | Incandescent | Fluorescent | Direct Sunlight | Flash | Cloudy | Shade).
3. Metering Mode (Matrix Center - Average - Spot).
4. Shift Focus Point RIGHT.*
5. Shift Focus Point UP*
6. Shift Focus Point LEFT.*
7. Shift Focus Point DOWN.*
8. Exposition Compensation EV +.
9. Exposition Compensation EV -.
10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.

* not available for D3000 | D3100 | D3200 | D3300 | D3400

