

Right Hand Control

leo³

1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).

2. Photo Shoot:

Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).

Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).

In Video Mode, starts or ends the Video Recording (REC).

3. This Button Starts or Ends the Video Recording (REC), also in Photo Mode.

The following buttons are enabled in Manual Mode (M). The mode selection must be done before inserting the camera into the Housing. If you choose another mode, only manually set functions are available. If you use the Camera in Video Mode, you will be able to switch video modes.

4. Aperture -

5. Aperture +

6. Shutter Speed -

7. Shutter Speed +

Press the buttons 4,5,6,7,8,9 once to change by one step. Keep pressed to quickly change the chosen parameter.

8. ISO +

9. ISO -

10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption.



Front

Hand Control - Right

Back

With S1 and S1R, it is necessary to Remove the Rubber Protection of the Camera's Viewfinder, to allow the correct closure of the housing.

Left Hand Control

leo³

1. Autofocus Video Mode (Keep Hold until the lens find the focus).
2. In Video Mode, starts or ends the Video Recording (REC).
3. Change Video Mode:
 - Video Mode A/S/P/M.
4. Focus Area Mode. Press the button to scroll through the available options.
5. In Preset WB Custom, press the button to acquire WB in Manual.
6. Focus point shift (9 positions, press to scroll).
7. Set the Resolution and the Quality in Video Mode.
8. P-Style Button, change Preset Filters (Black and White, Natural, Vivid Colors, ecc...).
9. Change Preset White Balance (Auto | Incandescent | Fluorescent | Direct Sunlight | Flash | Cloudy | Shade).
10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption.



Hand Control - Left

Back

Front

With S1 and S1R, it is necessary to Remove the Rubber Protection of the Camera's Viewfinder, to allow the correct closure of the housing.