

## Right Hand Control



- 1.** Autofocus (Exposure Reading) and Shutter Release Mode.  
To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.).
  - 2.** Photo Shoot:  
Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).  
Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).  
In mode video, the button become REC.
  - 3.** Change Mode (M/Av/Tv/P), Available on R5 and R6. Insert the Camera in Mode M. On R7 photo shoot and Rec (as Button 2).
- Buttons 4,5,6,7 change functions depending in which mode is setted the camera.
- |                           |                           |                        |
|---------------------------|---------------------------|------------------------|
| Manual Mode:              | Shutter Priority (TV)     | Aperture Priority (AV) |
| <b>4.</b> Aperture -      | <b>4.</b> EV -            | <b>4.</b> Aperture -   |
| <b>5.</b> Aperture +      | <b>5.</b> EV +            | <b>5.</b> Aperture +   |
| <b>6.</b> Shutter Speed - | <b>6.</b> Shutter Speed - | <b>6.</b> EV -         |
| <b>7.</b> Shutter Speed + | <b>7.</b> Shutter Speed + | <b>7.</b> EV +         |
- 8.** ISO +                    **Press the buttons 4,5,6,7,8,9 once to change by one step. Keep pressed to quickly change the chosen parameter.**
  - 9.** ISO -
  - 10.** On/Off electronic board (to turn on press once, to turn off keep pressed for about three seconds until the board turns off). The Camera will go into Auto Power Off after the time set in the camera menu. To turn the camera on again, in addition to pressing this button, after the board is on, press button 2.



Front

Back

## Left Hand Control



1. Focus point/areas shift, 9 perimeter positions plus central position.
2. x5 and x10 zoom of focus area point.
3. Area Focus mode.
4. Video Mode activation. To return to Photo mode, press the button 4 again.
5. Change Preset of White Balance (WB).

6. In photo mode: Drive mode.

In video mode, on R5 and R6, by selecting the Custom WB position with button 5, you can acquire the white balance manually. In addition, by holding down button 1 on the right-handle, it allows to have the crop of the sensor.

On R7 the Custom Wb it's not available.

7. Autofocus Mode. In photo mode, select ONE SHOT - SERVO.  
In Video mode, enable or disable SERVO MODE.

8. In photo mode: Metering Mode.

In video Mode: Change video resolution, advance one step higher.

9. In Photo mode: Photo Quality.

In video Mode: Change video resolution, advance one step lower.

10. On/Off electronic board (to turn on press once, to turn off keep pressed for about three seconds until the board turns off). The Camera will go into Auto Power Off after the time set in the camera menu. To turn the camera on again, in addition to pressing this button, after the board is on, press button 2 on the right-handle.

