

Right Hand Control

leo³

1. Autofocus (Exposure Reading) and Shutter Release Mode. To change the shooting mode, hold down Button 1 until the Red LED is switched on (15 sec.). In Video Mode becomes the af-on.

2. Photo Shoot:

Mode 1: When you press the button you have the autofocus, when you release the button you will have the shoot (Default Setting).

Mode 2: When you press the button first you have the autofocus and then the shoot. (If the lens is already in focus you will have the direct shoot).

In Video Mode becomes REC.

3. Change Mode (M/Av/Tv/P). Insert the camera in mode M.

Buttons 4,5,6,7 Change function depending in which Mode is setted the Camera.

Manual Mode (M):	Shutter - Priority (Tv):	Aperture - Priority (Av):
4. Aperture -	4. EV -	4. Aperture -
5. Aperture +	5. EV +	5. Aperture +
6. Shutter Speed -	6. Shutter Speed -	6. EV -
7. Shutter Speed +	7. Shutter Speed +	7. EV +

8. ISO +

9. ISO -

10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.

Press the buttons 4,5,6,7,8,9 once to change by one step. Keep pressed to quickly change the chosen parameter.



Front

Back

Left Hand Control

leo³

1. Displacement of the focus point, you can move the point in the center of the nine square of the grid.
2. x5 x10 zoom of focus area point.
3. Change Autofocus Mode.
4. Video Mode activation. To return to Photo mode, press the button 4 again.
5. Change Preset White Balance.
6. Change Photo or video quality.
7. On / Off servo (video) or continuous af (photo).
8. Change Metering Mode (Matrix Center-Average-Spot). In WB Custom this button acquire the WB in Manual.
9. Change Drive Mode.
10. On / Off electronic board (to switch on press once, to switch off hold down about 3 seconds until the board is switched off). The camera will go in Standby limiting the power consumption. To activate the Camera, after switch on the electronic card, press the Button 2.



Back

Hand Control - Left

Front