

Main Mode

leo^R

1. Autofocus (exposure reading) and shooting mode change. To change shooting mode, keep the button pressed until the icon changes on the display. In Ph. Mode, the timer shooting ends.

2. Shooting:

Mode (Re): When the button is pressed, autofocus occurs, when the button is released, the shot will be triggered.

Mode (Pr): When the button is pressed, first the autofocus is obtained and then the shutter. (if the lens is already in focus, direct shooting will occur).

Mode (Ph): When the button is pressed, the timed shutter for the photogrammetry function is triggered (Mode Activated on Demand).

In video mode, the button activates or deactivates video recording (REC).

3. Change Mode (M / Av / Tv / P). Put the Camera in M Mode.

4. Aperture -.

5. Aperture +.

6. Shutter Speed -.

7. Shutter Speed +.

8. ISO -.

9. ISO +.

For buttons 4 - 5 - 6 - 7 - 8 - 9, press once to change by one step, keep pressed to change the parameter in sequence.

10. Switch Button, by pressing once you pass to the Switch, and a blue led lights up. Pressing another time turns off the LED and returns to the main mode. Keeping the button pressed for 3 sec. The Housing Menu mode is activated and a purple LED lights up. Follow the numbering of the buttons in this manual to navigate the menus. To exit the menu mode, press button 11 "on / off".

11. Housing and camera "on / off" button. To switch on, keep the button pressed until the monitor housing is switched on (Easydive logo). It is possible to turn off or turn on the camera only, by pressing the button once quickly. To turn off both the housing and camera, press and hold the button until it turns off.



Buttons Panel LeoR

Switch Mode

Blue Led Activated



1. Autofocus (exposure reading) and shooting mode change. To change shooting mode, keep the button pressed until the icon changes on the display. In Ph. Mode, the timer shooting ends.

2. Shooting:

Mode (Re): When the button is pressed, autofocus occurs, when the button is released, the shot will be triggered.

Mode (Pr): When the button is pressed, first the autofocus is obtained and then the shutter. (if the lens is already in focus, direct shooting will occur).

Mode (Ph): When the button is pressed, the timed shutter for the photogrammetry function is triggered (Mode Activated on Demand).

In video mode, the button activates or deactivates video recording (REC).

3. Autofocus Mode. (AFs - AFc - MF - iAF)

4. White Balance Preset.

5. Metering Mode. (Spot - Center - High - Multi).

6. Focus -, in AF Mode "MF" (pressing the button automatically sets the AF mode to MF), decreases the focus distance, for manual control. Keep the key pressed for faster setting.

7. Focus +, in AF Mode "MF" (pressing the button automatically sets the AF mode to MF), increases the focus distance, for manual control. Keep the key pressed for faster setting.

8. Change Photo / Video Mode.

9. Drive Mode.

10. Switch Button, by pressing once you pass to the Switch, and a blue led lights up. Pressing another time turns off the LED and returns to the main mode. Keeping the button pressed for 3 sec. The Housing Menu mode is activated and a purple LED lights up. Follow the numbering of the buttons in this manual to navigate the menus. To exit the menu mode, press button 11 "on / off".

11. Housing and camera "on / off" button *. To switch on, keep the button pressed until the monitor housing is switched on (Easydive logo). It is possible to turn off or turn on the camera only, by pressing the button once quickly. To turn off both the housing and camera, press and hold the button until it turns off.

* For improved management of camera shutdown, the purchase of a compatible external battery is recommended.



Buttons Panel LeoR