

Main Mode

leo^R

Z5 | Z50 | Z6 | Z6 II | Z7 | Z7 II | Z8 | Z fc | D780

1. Autofocus (exposure reading) and shooting mode change. To change shooting mode, keep the button pressed until the icon changes on the display. In Ph. Mode, the timer shooting ends.

2. Shooting:

Mode (Re): When the button is pressed, autofocus occurs, when the button is released, the shot will be triggered.

Mode (Pr): When the button is pressed, first the autofocus is obtained and then the shutter. (if the lens is already in focus, direct shooting will occur).

Mode (Ph): When the button is pressed, the timed shutter for the photogrammetry function is triggered (Mode Activated on Demand).

In video mode, the button activates or deactivates video recording (REC)*.

3. AF Mode, (AF-S | AF-C | MF) .

4. Aperture -.

5. Aperture +.

6. Shutter Speed -.

7. Shutter Speed +.

8. ISO -.

9. ISO +.

For buttons 4 - 5 - 6 - 7 - 8 - 9, press once to change by one step, keep pressed to change the parameter in sequence.

10. Switch Button, by pressing once you pass to the Switch 1, and a blue led lights up. Pressing the button once more switches to the Switch 2 and a yellow LED lights up. Pressing a third time turns off the LED and returns to the main mode. Keeping the button pressed for 3 sec. The Housing Menu mode is activated and a purple LED lights up. Follow the numbering of the buttons in this manual to navigate the menus. To exit the menu mode, press button 11 "on / off".

11. Housing and camera "on / off" button**. To switch on, keep the button pressed until the monitor housing is switched on (Easydive logo). It is possible to turn off or turn on the camera only, by pressing the button once quickly. To turn off both the housing and camera, press and hold the button until it turns off.

* The Video Mode must be selected before inserting the camera inside the housing.

** For improved management of camera shutdown, the purchase of a compatible external battery is recommended.



Buttons Panel LeoR

Switch Mode 1

Blue Led Activated



Z5 | Z50 | Z6 | Z6 II | Z7 | Z7 II | Z8 | Z fc | D780

1. Autofocus (exposure reading) and shooting mode change. To change shooting mode, keep the button pressed until the icon changes on the display. In Ph. Mode, the timer shooting ends.

2. Shooting:

Mode (Re): When the button is pressed, autofocus occurs, when the button is released, the shot will be triggered.

Mode (Pr): When the button is pressed, first the autofocus is obtained and then the shutter. (if the lens is already in focus, direct shooting will occur).

Mode (Ph): When the button is pressed, the timed shutter for the photogrammetry function is triggered (Mode Activated on Demand).

In video mode, the button activates or deactivates video recording (REC)*.

3. Picture Style.

4. White Balance Preset.

5. Shift Point or Area of Focus. 9 Perimeter positions in addition to the central point.

6. Drive Mode (Photo Mode), Manages the type of Shoot (Single, Timed, etc ...).

In DSLR models it activates or deactivates the Liveview in Photo mode.

7. Video Resolution or Photo Format, changes the video resolution or the Photo Format (depends of the mode selected)*.

8. Change Focus Area, among the available settings (Points and Areas).

9. Sensor Format, allows you to select the sensor format from FX | DX | 1: 1 | 5: 4 | 16: 9.

10. Switch Button, by pressing once you pass to the Switch 1, and a blue led lights up. Pressing the button once more switches to the Switch 2 and a yellow LED lights up. Pressing a third time turns off the LED and returns to the main mode. Keeping the button pressed for 3 sec. The Housing Menu mode is activated and a purple LED lights up. Follow the numbering of the buttons in this manual to navigate the menus. To exit the menu mode, press button 11 "on / off".

11. Housing and camera "on / off" button **. To switch on, keep the button pressed until the monitor housing is switched on (Easydive logo). It is possible to turn off or turn on the camera only, by pressing the button once quickly. To turn off both the housing and camera, press and hold the button until it turns off.

* The Video Mode must be selected before inserting the camera inside the housing.

**For improved management of camera shutdown, the purchase of a compatible external battery is recommended.



Front



Back

Buttons Panel LeoR

Switch Mode 2

Yellow Led Activated

leo^R

1. Autofocus (exposure reading) and shooting mode change. To change shooting mode, keep the button pressed until the icon changes on the display. In Ph. Mode, the timer shooting ends. For Compatible models*, Zoom + command.

2. Shooting, for Compatible models*, Zoom - Command:

Mode (Re): When the button is pressed, autofocus occurs, when the button is released, the shot will be triggered.

Mode (Pr): When the button is pressed, first the autofocus is obtained and then the shutter. (if the lens is already in focus, direct shooting will occur).

Mode (Ph): When the button is pressed, the timed shutter for the photogrammetry function is triggered (Mode Activated on Demand).

In video mode, the button activates or deactivates video recording (REC)**.

3. Focus point shift or in the Menü*, Up Arrow.

4. Focus point shift or in the Menü*, Left Arrow.

5. Focus point shift or in the Menü*, Right Arrow.

6. Focus point shift or in the Menü*, Down Arrow.

7. Focus point shift or in the Menü*, shift the point to the Center.

8. Metering Mode, for Compatible models* Play Mode.

9. Flash Mode, for Compatible models* Menu.

10. Switch Button, by pressing once you pass to the Switch 1, and a blue led lights up. Pressing the button once more switches to the Switch 2 and a yellow LED lights up. Pressing a third time turns off the LED and returns to the main mode. Keeping the button pressed for 3 sec. The Housing Menu mode is activated and a purple LED lights up. Follow the numbering of the buttons in this manual to navigate the menus. To exit the menu mode, press button 11 "on / off".

11. Housing and camera "on / off" button *.** To switch on, keep the button pressed until the monitor housing is switched on (Easydive logo). It is possible to turn off or turn on the camera only, by pressing the button once quickly. To turn off both the housing and camera, press and hold the button until it turns off.

* Menu and Play commands, available for Z6 II - Z7 II - Z50 - Z fc models

** The Video Mode must be selected before inserting the camera inside the housing.

*** For improved management of camera shutdown, the purchase of a compatible external battery is recommended.

Through the use of the LeoR APP, it is possible to add the Mode Function (M - A - S - P) for the Z8 model to the commands.



Front

Back

Buttons Panel LeoR