

## Main Mode



**1. Autofocus** (exposure reading) and shooting mode change. To change shooting mode, keep the button pressed until the icon changes on the display. In Ph. Mode, the timer shooting ends.

**2. Shooting:**

Mode (Re): When the button is pressed, autofocus occurs, when the button is released, the shot will be triggered.

Mode (Pr): When the button is pressed, first the autofocus is obtained and then the shutter. (if the lens is already in focus, direct shooting will occur).

Mode (Ph): When the button is pressed, the timed shutter for the photogrammetry function is triggered (Mode Activated on Demand).

In video mode, the button activates or deactivates video recording (REC).

**3. Change Photo / Video Mode.**

**4. Aperture -.**

**5. Aperture +.**

**6. Shutter Speed -.**

**7. Shutter Speed +.**

**8. ISO -.**

**9. ISO +.**

For buttons 4 - 5 - 6 - 7 - 8 - 9, press once to change by one step, keep pressed to change the parameter in sequence.

**10. Switch Button**, by pressing once you pass to the Switch 1, and a blue led lights up. Pressing the button once more switches to the Switch 2 and a yellow LED lights up. Pressing a third time turns off the LED and returns to the main mode. Keeping the button pressed for 3 sec. The Housing Menu mode is activated and a purple LED lights up. Follow the numbering of the buttons in this manual to navigate the menus. To exit the menu mode, press button 11 "on / off".

**11. Housing and camera "on / off" button** \*. To switch on, keep the button pressed until the monitor housing is switched on (Easydive logo). It is possible to turn off or turn on the camera only, by pressing the button once quickly. To turn off both the housing and camera, press and hold the button until it turns off.

\* For improved management of camera shutdown, the purchase of a compatible external battery is recommended.



Buttons Panel LeoR

## Switch Mode 1

Blue Led Activated

**leo<sup>R</sup>**

**1. Autofocus** (exposure reading) and shooting mode change. To change shooting mode, keep the button pressed until the icon changes on the display. In Ph. Mode, the timer shooting ends.

### 2. Shooting:

Mode (Re): When the button is pressed, autofocus occurs, when the button is released, the shot will be triggered.

Mode (Pr): When the button is pressed, first the autofocus is obtained and then the shutter. (if the lens is already in focus, direct shooting will occur).

Mode (Ph): When the button is pressed, the timed shutter for the photogrammetry function is triggered (Mode Activated on Demand).

In video mode, the button activates or deactivates video recording (REC).

**3. Autofocus Mode.** In photo mode it allows you to select ONE SHOT - SERVO.

**4. White Balance Preset.**

**5. Shift Point or Area of Focus.** 9 Perimeter positions in addition to the central point.

**6. Picture Style** (Color Management and Filters).

**7. Video Resolution or Photo Format,** changes the video Resolution or Photo Format one step forward.

**8. Enable LiveView in Photo mode.**

**9. Drive Mode (Photo Mode),** in Video Mode it allows the acquisition of the white balance in manual (Push Custom White Balance).

**10. Switch Button,** by pressing once you pass to the Switch 1, and a blue led lights up. Pressing the button once more switches to the Switch 2 and a yellow LED lights up. Pressing a third time turns off the LED and returns to the main mode. Keeping the button pressed for 3 sec. The Housing Menu mode is activated and a purple LED lights up. Follow the numbering of the buttons in this manual to navigate the menus. To exit the menu mode, press button 11 "on / off".

**11. Housing and camera "on / off" button \*** To switch on, keep the button pressed until the monitor housing is switched on (Easydive logo). It is possible to turn off or turn on the camera only, by pressing the button once quickly. To turn off both the housing and camera, press and hold the button until it turns off.

\* For improved management of camera shutdown, the purchase of a compatible external battery is recommended.



Buttons Panel LeoR

## Switch Mode 2

Yellow Led Activated

**leo<sup>R</sup>**

**1. Autofocus** (exposure reading) and shooting mode change. To change shooting mode, keep the button pressed until the icon changes on the display. In Ph. Mode, the timer shooting ends.

### 2. Shooting:

Mode (Re): When the button is pressed, autofocus occurs, when the button is released, the shot will be triggered.

Mode (Pr): When the button is pressed, first the autofocus is obtained and then the shutter. (if the lens is already in focus, direct shooting will occur).

Mode (Ph): When the button is pressed, the timed shutter for the photogrammetry function is triggered (Mode Activated on Demand).

In video mode, the button activates or deactivates video recording (REC).

**3. In Photo Mode** increases the focus point or area by x5 or x10.

**4. Video Resolution or Photo Format**, changes the video or Photo Format one step back.

### 5. Metering Mode

**6. Aspect Ratio ( 3:2 | 4:3 | 16:9 | 1:1).**

**7. No Associated Function.**

**8. No Associated Function.**

**9. No Associated Function.**

**10. Switch Button**, by pressing once you pass to the Switch 1, and a blue led lights up. Pressing the button once more switches to the Switch 2 and a yellow LED lights up. Pressing a third time turns off the LED and returns to the main mode. Keeping the button pressed for 3 sec. The Housing Menu mode is activated and a purple LED lights up. Follow the numbering of the buttons in this manual to navigate the menus. To exit the menu mode, press button 11 "on / off".

**11. Housing and camera "on / off" button** \*. To switch on, keep the button pressed until the monitor housing is switched on (Easydive logo). It is possible to turn off or turn on the camera only, by pressing the button once quickly. To turn off both the housing and camera, press and hold the button until it turns off.

\* For improved management of camera shutdown, the purchase of a compatible external battery is recommended.



Front

Back

Buttons Panel LeoR