

Main Mode

leo³ wi

1. Autofocus (exposure reading) and shooting mode change. To change shooting mode, press and hold button 1 until the Red Led turns on (15 sec.).

2. In Video Mode, Activate or Stop Video Recording. In Photo Mode:

Mode 1: When you press the button, you have autofocus, when you release the button you will have the shot (Default Setting).

Mode 2: When you press the button, you have first autofocus and then shooting. (if the lens is already in focus, direct shooting will occur).

3. Video Mode activation. To return to Photo mode, press the button 3 again.

Buttons 4,5,6,7 change functions depending in which mode is setted the camera.

Manual Mode:	Shutter Priority (TV):	Aperture Priority (AV):
4. Aperture -	4. EV -	4. Aperture -
5. Aperture +	5. EV +	5. Aperture +
6. Shutter Speed -	6. Shutter Speed -	6. EV -
7. Shutter Speed +	7. Shutter Speed +	7. EV +

8. ISO - Press the Buttons 4,5,6,7,8,9 once to change by one step. Keep
9. ISO + pressed to quickly change the chosen parameter.

10. Switch button, by pressing it you change the functions of the each button.

When in second mode, a blue warning LED lights up.

11. On/Off internal electronic board. To switch on, press until the red electronics LED is activated. To switch off, press and hold for 5 seconds and release the button. The camera will go into Auto Power Off after the time set in the camera menu. To activate the Camera, simply turn on the electronics by pushing this button again, and when the red LED flashes, press button 2 (Shutter Release).



Front

Button Panel Leo3 Wi

Back

Switch Mode Blue Led Activated

leo³ wi

1. Push Button for manual WB (choose first a Preset WB Custom, Button 9).
2. In Video Mode, Activate or Stop Video Recording. In Photo Mode:
Mode 1: When you press the button, you have autofocus, when you release the button you will have the shot (Default Setting).
Mode 2: When you press the button, you have rst autofocus and then shooting. (if the lens is already in focus, direct shooting will occur).
3. x5 and x10 zoom of focus area point.
4. Change Preset White Balance (Auto | Custom | Incandescent | Fluorescent | Direct Sunlight | Flash | Cloudy | Shade).
5. Focus Area Mode. Press the button to scroll through the available options.
6. In photo mode: Metering Mode.
In video mode, in Custom WB position, you can acquire the white balance manually.
7. Autofocus Mode. Select ONE SHOT - SERVO.
8. In photo mode: Metering Mode.
In video Mode: Change video resolution, advance one step higher.
9. In Photo mode: Photo Quality.
In video Mode: Change video resolution, advance one step lower.
10. Switch button, by pressing it you change the functions of the each button. When in second mode, a blue warning LED lights up.
11. On/Off internal electronic board. To switch on, press until the red electronics LED is activated. To switch off, press and hold for 5 seconds and release the button. The camera will go into Auto Power Off after the time set in the camera menu. To activate the Camera, simply turn on the electronics by pushing this button again, and when the red LED flashes, press button 2 (Shutter Release).



Front

Button Panel Leo3 Wi

Back