

## Main Mode

leo<sup>3</sup> wi

1. Autofocus (exposure reading) and shooting mode change. To change shooting mode, press and hold button 1 until the Red Led turns on (15 sec.).
2. In Video Mode, Activate or Stop Video Recording. In Photo Mode:  
Mode 1: When you press the button, you have autofocus, when you release the button you will have the shot (Default Setting).  
Mode 2: When you press the button, you have first autofocus and then shooting. (if the lens is already in focus, direct shooting will occur).

### 3. Button that starts and ends video recording (REC).

The following buttons are active in Manual Mode (M). If you choose another mode, only the functions that can be set manually will be available.

4. Aperture -
5. Aperture +
6. Shutter Speed -
7. Shutter Speed +
8. ISO -
9. ISO +

Press the Buttons 4,5,6,7,8,9 once to change by one step. Keep pressed to quickly change the chosen parameter.

### 10. Switch button, by pressing it you change the functions of the each button.

When in second mode, a blue warning LED lights up.

### 11. On/Off internal electronic board. To switch on, press until the red electronics LED is activated. To switch off, press and hold for 5 seconds and release the button. The camera will turn off completely. To activate the Camera, simply turn on the electronics by pushing this button again, and when the Blue LED flashes, press button 2 (Shutter Release).



Front

Button Panel Leo3 Wi

Back

## Switch Mode Blue Led Activated

leo<sup>3</sup> wi

1. Autofocus (exposure reading) and shooting mode change. To change shooting mode, press and hold button 1 until the Red Led turns on (15 sec.).
2. In Video Mode, Activate or Stop Video Recording. In Photo Mode:  
Mode 1: When you press the button, you have autofocus, when you release the button you will have the shot (Default Setting).  
Mode 2: When you press the button, you have rst autofocus and then shooting. (if the lens is already in focus, direct shooting will occur).
3. Push Button for manual WB (choose first a Preset WB Custom, Button 9)
4. Change video resolution, advance one step lower.
5. Change video resolution, advance one step higher.
6. Focus point shift (9 positions, press to scroll).
7. Focus Area Mode. Press the button to scroll through the available options.
8. P-Style Button, change Preset Filters (Black and White, Natural, Vivid Colors, ecc...).
9. Change Preset White Balance (Auto | Custom | Incandescent | Fluorescent | Direct Sunlight | Flash | Cloudy | Shade).
10. Switch button, by pressing it you change the functions of the each button. When in second mode, a blue warning LED lights up.
11. On/Off internal electronic board. To switch on, press until the red electronics LED is activated. To switch off, press and hold for 5 seconds and release the button. The camera will turn off completely. To activate the Camera, simply turn on the electronics by pushing this button again, and when the Blue LED flashes, press button 2 (Shutter Release).



Front

Button Panel Leo3 Wi

Back