Easydive

LEO3 WI

Settings for Sony α cameras





leo3 wi

How to set up your Sony camera
for use with the universal housing

Cameras with old Menu (version 1), IR connectivity, Multipin Cable and View Finder - PAG. 3

- α 6000
- α 7
- α 7 II
- α 7r
- α 7s

Cameras with Old Menu (Version 1), IR connectivity, USB power, Multipin cable and View Finder - PAG. 4

- α 6300
- α 7r II
- α 7s II

Cameras with Old Menu (Version 2), IR connectivity, USB power, Multipin cable and View Finder

Group 1 - PAG. 5 - 6

- α 6100
- α 6400
- α 6500
- α 6600
- α 7 III
- α 7r III
- α 9

Group 2 - PAG. 7 - 8 - 9

- α 7r IV
- α 9 II

Cameras with Old Menu (Version 2), USB Power and View Finder - PAG 10 - 11 - 12

- α 7C
- α 7Cr

Cameras with Old Menu (Version 2) and USB Power

PAG 13 - 14 - 15

- ZV-E10

Cameras with new menu, IR connectivity, USB power, multi-pin cable and View Finder - PAG 16 - 17

- α 1
- α 7s III

Cameras with new menu, IR connectivity, USB power and multi-pin cable - PAG 18 - 19

- FX3 Cinema Line

Cameras with New Menu, USB Power, Multipin Cable and View Finder - PAG 20 - 21

- α 1 II
- α 7 IV
- α 7r V
- α 9 III

Cameras with new menu, USB power and multi-pin cable - PAG 22 - 23

- FX30 Cinema Line

Cameras with New Menu, USB Power and View Finder

PAG 24 - 25 - 26

- α 6700
- α 7C II

Cameras with New Menu and USB Power - PAG 27 - 28

- ZV-E1
- ZV-E10 II


Cameras with old Menu (version 1), IR connectivity, Multipin Cable and View Finder

Models: a 6000 - a 7 - a 7 II - a 7r - a 7s



MENU → (Setup) →
[USB Connection] →
[PC Remote]

1

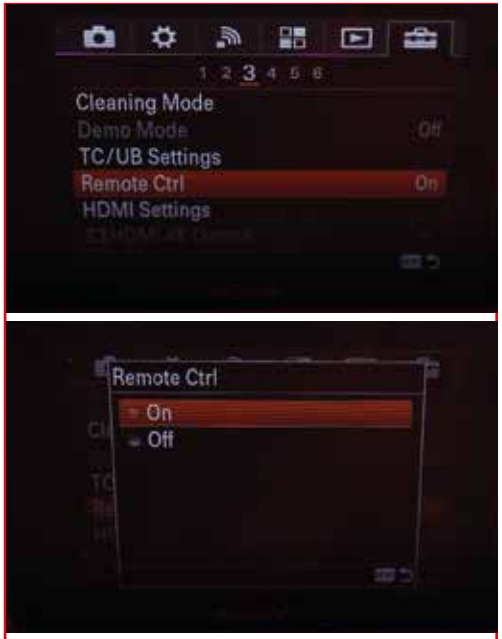

MENU → (Setup) →
[Remote Ctrl] →
[On]

2



MENU → (Custom Settings) →
[FINDER/MONITOR] →
[MONITOR]

3

Cameras with Old Menu (Version 1), IR connectivity, USB power, Multipin cable and View Finder

Models: a 6300 - a 7r II - a 7s II



MENU → (Setup) →
[USB Connection] →
[PC Remote]

1



MENU → (Setup) →
[USB Power Supply] →
[On]

2



MENU → (Setup) →
[Remote Ctrl] →
[On]

3




MENU → (Custom Settings) →
[FINDER/MONITOR] →
[MONITOR(Manual)]

4

Cameras with Old Menu (Version 2), IR connectivity, USB power, Multipin cable and View Finder

Models (Group 1): α 6100 - α 6400 - α 6500 - α 6600 - α 7 III - α 7r III - α 9

Part 1/2

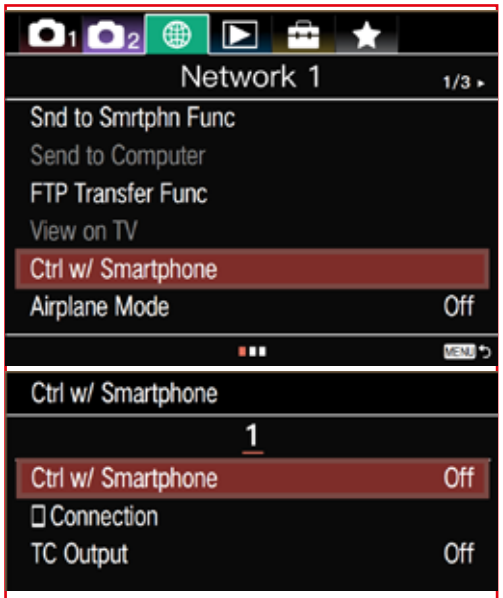

MENU → (Network) →
[Ctrl w/ Smartphone] →
[Ctrl w/ Smartphone] →
[Off]

1



MENU → (Network) →
[Bluetooth Settings] →
[Bluetooth Function] →
[Off]

2



MENU → (Setup) →
[USB Connection] →
[PC Remote]

3



MENU → (Setup) →
[PC Remote Settings] →
[Still Img. Save Dest.] →
[PC+Camera]

4

Cameras with Old Menu (Version 2), IR connectivity, USB power, Multipin cable and View Finder

Models (Group 1): α 6100 - α 6400 - α 6500 - α 6600 - α 7 III - α 7r III - α 9

Part 2/2



MENU → (Setup) →
[USB Power Supply] →
[On]

5



MENU → (Setup) →
[Remote Ctrl] →
[On]

6




MENU → 2 (Camera Settings2) →
[FINDER/MONITOR] →
[MONITOR(Manual)]

7

Cameras with Old Menu (Version 2), IR connectivity, USB power, Multipin cable and View Finder

Models (Group 2): α 7r IV - α 9 II

Part 1/3

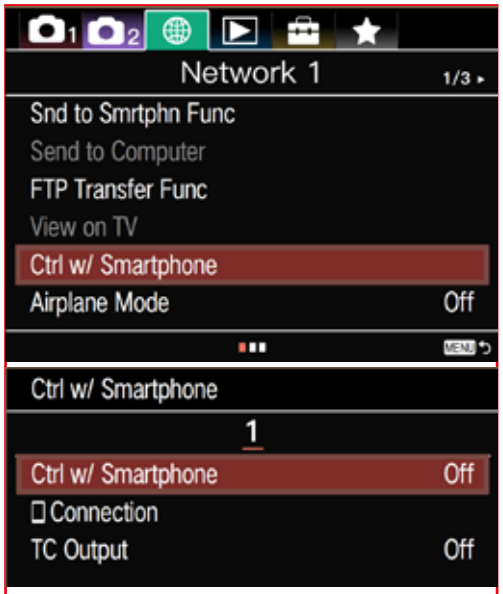

MENU → (Network) →
[Ctrl w/ Smartphone] →
[Ctrl w/ Smartphone] →
[Off]

1



MENU → (Network) →
[Bluetooth Settings] →
[Bluetooth Function] →
[Off]

2



MENU → (Network) →
[Pc Remote Function] →
[Pc Remote] →
[On]

3



MENU → (Network) →
[Pc Remote] →
[PC Remote Cnct Method] →
[USB]

4

Cameras with Old Menu (Version 2), IR connectivity, USB power, Multipin cable and View Finder

Models (Group 2): α 7r IV - α 9 II

Part 2/3



MENU → (Network) →
[Pc Remote Function] →
[Still Img. Save Dest.] →
[Camera Only]

5



MENU → (Network) →
[Pc Remote Function] →
[Save Image Size] →
[Original]

6



MENU → 2 (Camera Settings2) →
[FINDER/MONITOR] →
[MONITOR(Manual)]

7



MENU → (Setup) →
[USB Power Supply] →
[On]

8

Cameras with Old Menu (Version 2), IR connectivity, USB power, Multipin cable and View Finder

Models (Group 2): α 7r IV - α 9 II

Part 3/3



MENU → (Setup) →
[IR Remote Ctrl] →
[On]

9



MENU → (Setup) →
[HDMI Settings] →
[HDMI Resolution] →
[1080i]

10


Easydive
THE UNIVERSAL HOUSING

leo3 wi

Cameras with Old Menu (Version 2), USB Power and View Finder

Models: a 7C - a 7CR

Part 1/3

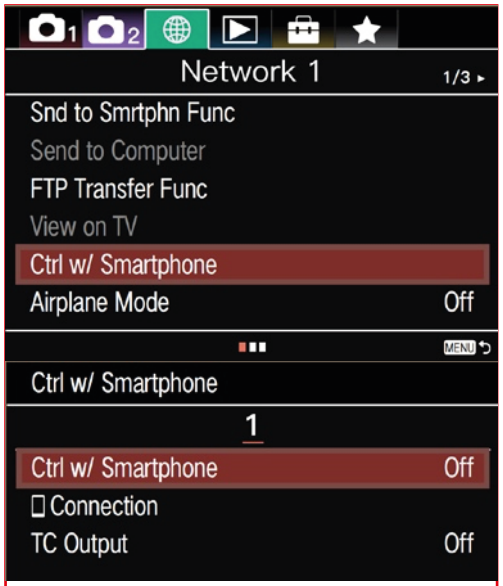

MENU → (Network) →
[Ctrl w/ Smartphone] →
[Ctrl w/ Smartphone] →
[Off]

1



MENU → (Network) →
[Bluetooth Settings] →
[Bluetooth Function] →
[Off]

2



MENU → (Network) →
[Pc Remote Function] →
[Pc Remote] →
[On]

3



MENU → (Network) →
[Pc Remote Function] →
[PC Remote Cnct Method] →
[USB]

4

Cameras with Old Menu (Version 2), USB Power and View Finder

Models: a 7C - a 7CR

Part 2/3



MENU → (Network) →
[Pc Remote] →
[Still Img. Save Dest.] →
[Camera Only]

5



MENU → (Network) →
[Pc Remote] →
[Save Image Size] →
[Original]

6



MENU → 2 (Camera Settings2) →
[FINDER/MONITOR] →
[MONITOR(Manual)]

7



MENU → (Setup) →
[USB Power Supply] →
[On]

8

Cameras with Old Menu (Version 2), USB Power and View Finder

Models: α 7C - α 7CR

Part 3/3



MENU → (Setup) →
[Power Save Start Time] →
[10 sec. - 1 min.]

9




MENU → (Setup) →
[Auto Power OFF Temp.] →
[High]

10

Cameras with Old Menu (Version 2) and USB Power

Models: ZV-E10

Part 1/3

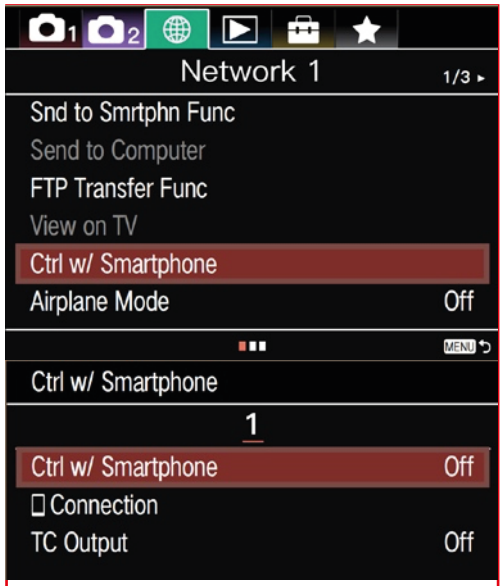

MENU → (Network) →
[Ctrl w/ Smartphone] →
[Ctrl w/ Smartphone] →
[Off]

1



MENU → (Network) →
[Bluetooth Settings] →
[Bluetooth Function] →
[Off]

2



MENU → (Network) →
[Pc Remote Function] →
[Pc Remote] →
[On]

3



MENU → (Network) →
[Pc Remote Function] →
[PC Remote Cnct Method] →
[USB]

4

Cameras with Old Menu (Version 2) and USB Power

Models: ZV-E10

Part 2/3



MENU → (Network) →
[Pc Remote] →
[Still Img. Save Dest.] →
[Camera Only]

5



MENU → (Network) →
[Pc Remote] →
[Save Image Size] →
[Original]

6



MENU → (Setup) →
[USB Power Supply] →
[On]

7

Cameras with Old Menu (Version 2) and USB Power

Models: ZV-E10

Part 3/3



MENU → (Setup) →
[Power Save Start Time] →
[10 sec. - 1 min.]

8



MENU → (Setup) →
[Auto Power OFF Temp.] →
[High]

9

Cameras with new menu, IR connectivity, USB power, multi-pin cable and View Finder

Models: α 1 - α 7s III

Part 1/2





MENU → (Network) →
[Bluetooth] →
[Bluetooth Function] →
[Off]

1






MENU → (Setup) →
[USB] → [USB Connection Mode] →
[PC Remote]

2



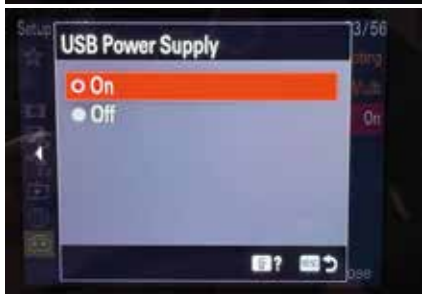

MENU → (Setup) →
[USB] →
[USB Power Supply] →
[On]

3





MENU → (Setup) →
[Setup Option] →
[IR Remote Ctrl] →
[On]

4

Cameras with new menu, IR connectivity, USB power, multi-pin cable and View Finder


Models: α 1 - α 7s III

Part 2/2




MENU → (Setup) →
[External Output] →
[HDMI Resolution] →
[1080i]

5

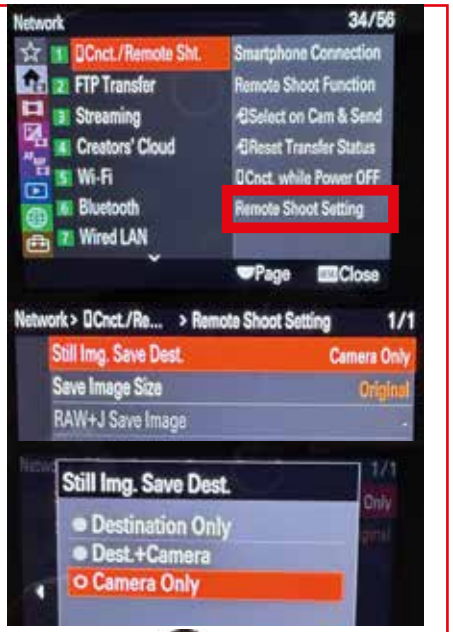

MENU → (Network) →
[Cnct./PC Remote] →
[Remote Shoot Setting] →
[Still Img. Save Dest.] →
[Camera Only]

6

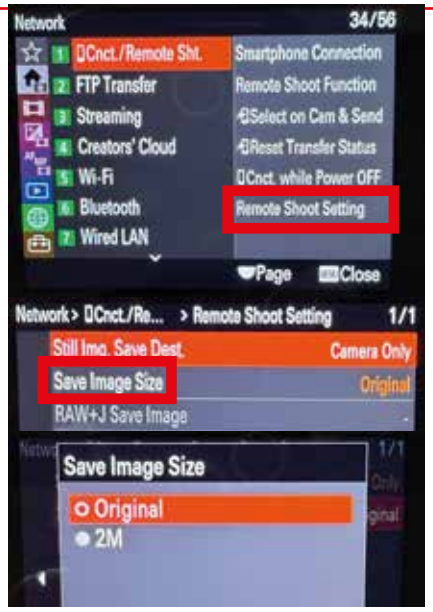

MENU → (Network) →
[Cnct./PC Remote] →
[Remote Shoot Setting] →
[Save Image Size] →
[Original]

7



MENU → (Setup) →
[Finder/Monitor] →
[Sel. Finder/Monitor] →
[Monitor (Manual)]

8

Cameras with new menu, IR connectivity, USB power and multi-pin cable

Models: FX3 Cinema Line

Part 1/2



MENU → (Network) →
[Bluetooth] →
[Bluetooth Function] →
[Off]

1




MENU → (Setup) →
[USB] → [USB Connection Mode] →
[PC Remote]

2



MENU → (Setup) →
[USB] →
[USB Power Supply] →
[On]

3

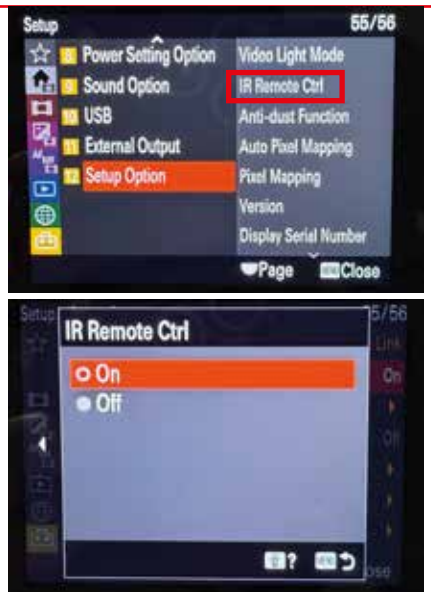

MENU → (Setup) →
[Setup Option] →
[IR Remote Ctrl] →
[On]

4

Cameras with new menu, IR connectivity, USB power and multi-pin cable

Models: FX3 Cinema Line

Part 2/2





MENU → (Setup) →
[External Output] →
[HDMI Resolution] →
[1080i]

5



MENU → (Network) →
[Cnct./PC Remote] →
[Remote Shoot Setting] →
[Still Img. Save Dest.] →
[Camera Only]

6



MENU → (Network) →
[Cnct./PC Remote] →
[Remote Shoot Setting] →
[Save Image Size] →
[Original]

7

Easydive
THE UNIVERSAL HOUSING

leo3 wi

Cameras with New Menu, USB Power, Multipin Cable and View Finder

Models: α 1 II - α 7 IV - α 7r V - α 9 III

Part 1/2





MENU → (Network) →
[Bluetooth] →
[Bluetooth Function] →
[Off]

1





MENU → (Setup) →
[USB] → [USB Connection Mode] →
[PC Remote]

2





MENU → (Setup) →
[USB] →
[USB Power Supply] →
[On]

3

Cameras with New Menu, USB Power, Multipin Cable and View Finder


Models: a 1 II - a 7 IV - a 7r V - a 9 III

Part 2/2




MENU → (Setup) →
[External Output] →
[HDMI Resolution] →
[1080i]

4

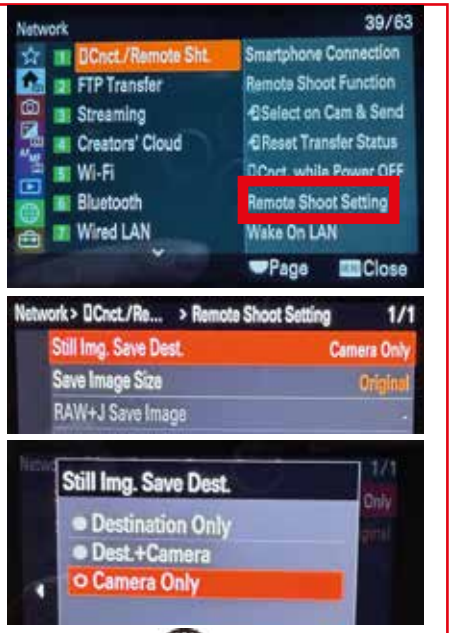

MENU → (Network) →
[Cnct./PC Remote] →
[Remote Shoot Setting] →
[Still Img. Save Dest.] →
[Camera Only]

5

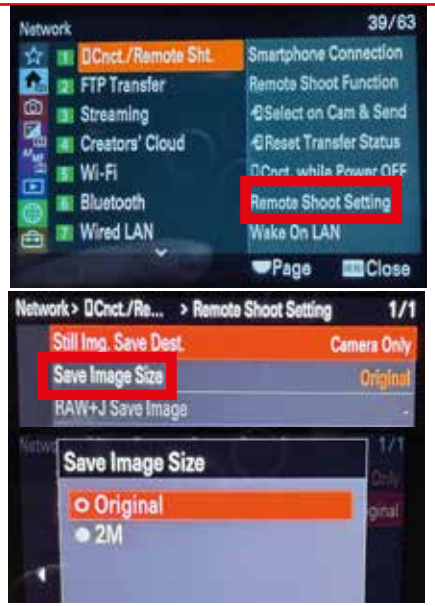

MENU → (Network) →
[Cnct./PC Remote] →
[Remote Shoot Setting] →
[Save Image Size] →
[Original]

6



MENU → (Setup) →
[Finder/Monitor] →
[Sel. Finder/Monitor] →
[Monitor (Manual)]

7

Cameras with new menu, USB power and multi-pin cable

Models: FX30 Cinema Line

Part 1/2



MENU → (Network) →
[Bluetooth] →
[Bluetooth Function] →
[Off]

1



MENU → (Setup) →
[USB] → [USB Connection Mode] →
[PC Remote]

2



MENU → (Setup) →
[USB] →
[USB Power Supply] →
[On]

3

Cameras with new menu, USB power and multi-pin cable

Models: FX30 Cinema Line

Part 2/2





MENU → (Setup) →
[External Output] →
[HDMI Resolution] →
[1080i]

4



MENU → (Network) →
[Cnct./PC Remote] →
[Remote Shoot Setting] →
[Still Img. Save Dest.] →
[Camera Only]

5




MENU → (Network) →
[Cnct./PC Remote] →
[Remote Shoot Setting] →
[Save Image Size] →
[Original]

6

Cameras with New Menu, USB Power and View Finder

Models: a 7C II - a 6700

Part 1/3

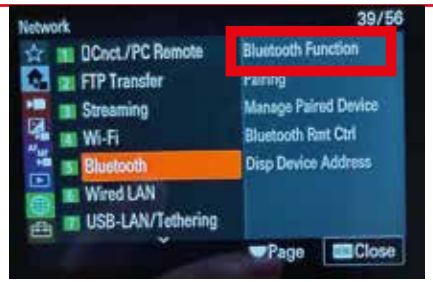



MENU → (Network) →
[Bluetooth] →
[Bluetooth Function] →
[Off]

1





MENU → (Setup) →
[USB] → [USB Connection Mode] →
[PC Remote]


2





MENU → (Setup) →
[USB] →
[USB Power Supply] →
[On]

3

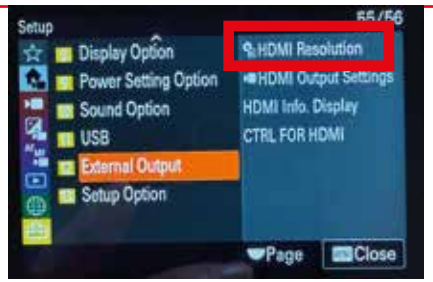




MENU → (Setup) →
[External Output] →
[HDMI Resolution] →
[1080i]

4

Cameras with New Menu, USB Power and View Finder

Models: a 7C II - a 6700

Part 2/3

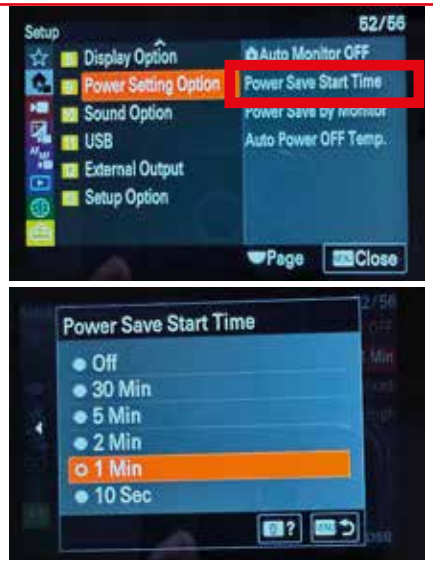

MENU → (Setup) →
[Power Setting Option] →
[Power Save Start Time] →
[1 min or 10 sec]

5




MENU → (Setup) →
[Power Setting Option] →
[Auto Power OFF Temp.] →
[High]

6



MENU → (Setup) →
[Finder/Monitor] →
[Sel. Finder/Monitor] →
[Monitor (Manual)]

7

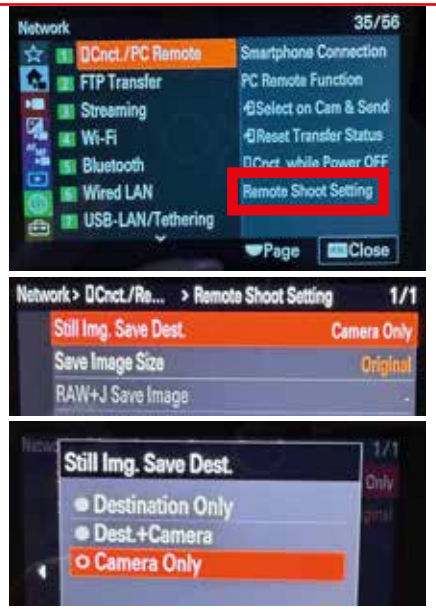

MENU → (Network) →
[Cnct/ PC Remote] →
[Remote Shoot Setting] →
[Still Img. Save Dest.] →
[Camera Only]

8

Cameras with New Menu, USB Power and View Finder

Models: a 7C II - a 6700

Part 3/3






MENU → (Network) →
[Cnct./PC Remote] →
[Remote Shoot Setting] →
[Save Image Size] →
[Original]

9

Cameras with New Menu and USB Power

Models: ZV-E1 - ZV-E10 II

Part 1/2

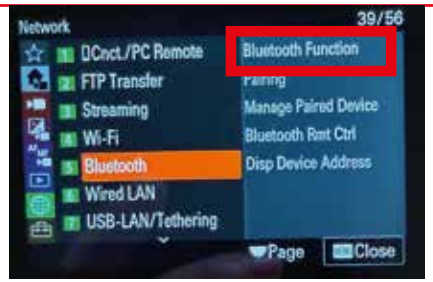



MENU → (Network) →
[Bluetooth] →
[Bluetooth Function] →
[Off]

1





MENU → (Setup) →
[USB] → [USB Connection Mode] →
[PC Remote]


2





MENU → (Setup) →
[USB] →
[USB Power Supply] →
[On]

3

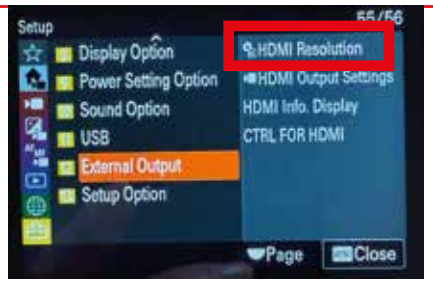



MENU → (Setup) →
[External Output] →
[HDMI Resolution] →
[1080i]

4


Easydive
THE UNIVERSAL HOUSING

leo3 wi

Cameras with New Menu and USB Power

Models: ZV-E1 - ZV-E10 II


Part 2/2

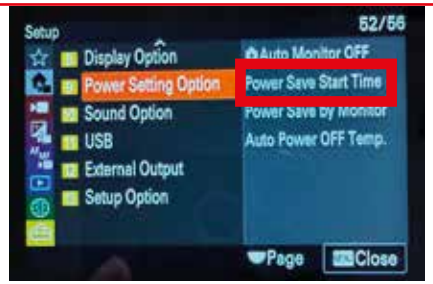



MENU → (Setup) →
[Power Setting Option] →
[Power Save Start Time] →
[1 min or 10 sec]


5

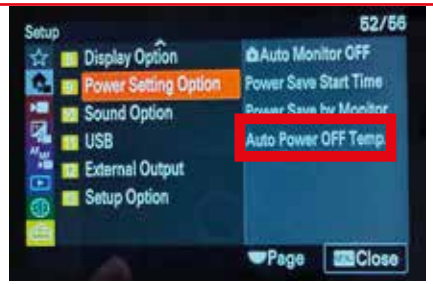



MENU → (Setup) →
[Power Setting Option] →
[Auto Power OFF Temp.] →
[High]

6

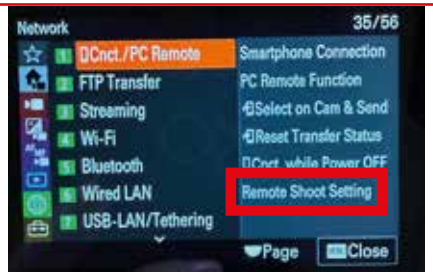





MENU → (Network) →
[Cnct/ PC Remote] →
[Remote Shoot Setting] →
[Still Img. Save Dest.] →
[Camera Only]

7



MENU → (Network) →
[Cnct./PC Remote] →
[Remote Shoot Setting] →
[Save Image Size] →
[Original]

8

leo3 wi

Easydive®

LEO3 WI